

Printer Information Page

Model Name: HP ENVY 6000 All-in-One Printer series

Service ID: 31152

Firmware Version: VASBASPP1N001.2034A.00

Bonjour Name: HP ENVY 6000 series [3B0CA6]

Estimated Ink Levels. Actual ink levels may vary: K-Ready, CMY-Ready

Serial Number: TH13F491VV

Quiet Mode: Off

Automatic Firmware Update: Off

Printer PIN: 55335164



To print documents and photos from your smartphone or tablet while away from home, finish setting up your printer. Hold the Information button* for 3 seconds until all buttons are lit, and then press the Resume button*. Follow the instructions on the page that is printed.



This printer is not connected to a network.

Wireless has been turned off. Press the smaller Wireless Setup button* on the back to turn on wireless.

Once Wi-Fi is turned on, for printed instructions on how to connect the printer to a wireless network, hold the Information button* for 3 seconds until all buttons are lit, and then press the Information button* again.

To print additional network information, hold the Information button* for 3 seconds until all buttons are lit, and then press the Information button* and the Resume button* at the same time.



With Wi-Fi Direct, you can connect your computer, smartphone, or tablet directly to a printer wirelessly—without connecting to an existing wireless network.

Wi-Fi Direct has been turned off.

For instructions on how to connect to the printer using Wi-Fi Direct, press and hold the Information button* for 3 seconds until all lights are lit, and then press the Information button and the Cancel button* at the same time.

Additional Assistance

- To print the Printer Status Report, press and hold the Information button* for 3 seconds until all lights are lit, and then press the Resume button* and the Cancel button* at the same time.
- The printer can automatically detect when one of the following paper sizes has been loaded: Letter, 5x7 in., 4x6 in. If you want to configure the printer to detect different sizes, use the HP Smart app or the printer home page (<http://0.0.0.0>).

For more information, see the documentation provided with the printer.

*Icon Descriptions

Information

Cancel

Resume

Copy

Power

Wireless Setup



Wireless Quick Start Guide

To create a NEW wireless connection between the HP printer and a wireless network, choose one of the following methods.



Method 1: Use a mobile device (such as a smartphone or tablet)

1. Make sure your mobile device has been connected to your wireless network and you know your Wi-Fi password.
2. On the printer, press and hold the Wireless Setup* button on the back of the printer for 3 seconds. Purple light will begin moving along the front edge of the printer, indicating that the printer is in Setup Mode.
3. If you have never installed the HP Smart app before, open a web browser, visit 123.hp.com to install the HP Smart app, and then follow the instructions on your mobile device.

If the HP Smart app is already installed, open the app. If the printer isn't found, select "Add a new printer", and then follow the on-screen instructions.

Note: After the printer connects successfully, the moving purple light turns off and is replaced by stationary, light-blue light.



Method 2: Use a computer

Note: You might be prompted to enter the wireless network name and password. (You can sometimes find them on the back or side of the wireless router if you have not changed them.)

1. Make sure your computer has been connected to your wireless network.
2. On the printer, press and hold the Wireless Setup* button on the back of the printer for 3 seconds. Purple light will begin moving along the front edge of the printer, indicating that the printer is in Setup Mode.
3. Complete the appropriate instructions:
 - If you have NOT installed the HP software or the HP Smart app before, open a web browser and visit 123.hp.com to install the HP software or the HP Smart app. Select "Connect a new printer", and then follow the instructions.
 - If you have installed the HP software or the HP Smart app already, complete the following steps:

Microsoft® Windows®

Windows® 10: If the HP printer software is installed, click the Start menu icon in the corner of the desktop, select "All apps", click "HP", click the folder for the printer, select the printer icon, and then click "Connect a new printer".

If the HP Smart app is installed, open the app. If the printer isn't found, select "Add a new printer", and then follow the on-screen instructions.

Windows® 7: Click "Start", click "Programs" or "All Programs", click "HP", click the folder for your printer, click "Printer Setup & Software", click "Connect a new printer", and then follow the on-screen instructions.

Wireless Quick Start Guide (Continue)

macOS

If the HP Smart app is installed, open the app. If the printer isn't found, select "Add a new printer", and then follow the on-screen instructions.

Note: After the printer connects successfully, the moving purple light turns off and is replaced by stationary, light-blue light.



Method 3: Use the printer control panel with WPS

Note: Ensure that Wi-Fi Protected Setup (WPS) is enabled with WPA encryption in your wireless router or wireless access point.

If your wireless router or wireless access point has a WPS button (a button with the WPS icon* or a button labeled "WPS"), complete the following steps:

1. On the back of the printer, press and hold the Power* and the Wireless Setup* buttons at the same time for 3 seconds. Purple light will begin blinking on the left and right edges of the printer, indicating that the printer is in Setup Mode.
2. On the wireless router or wireless access point, press and hold the WPS button for 3 seconds. Wait for about 2 minutes. After the printer connects successfully, the blinking purple light turns off and is replaced by light-blue light.
3. Visit 123.hp.com to install the HP software and get the most out of your printer.

Note: To test the wireless setup, press and hold the Information button* for 3 seconds until all buttons are lit, and then press the Information button and the Resume button* at the same time. The printed reports include tips to help solve any problems.

Tip: If you need further help, see the printed documentation provided in-box with the printer; visit the HP Wireless Printing Center (www.hp.com/go/wirelessprinting); or contact the person who set up your network.

*Icon Descriptions

WPS



Cancel



Information



Resume



Power



Wireless Setup



Microsoft®, Windows®, Windows® 7, Windows® 8, Windows® 8.1 and Windows® 10 are U.S. registered trademarks of Microsoft Corporation.